

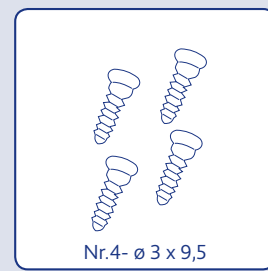
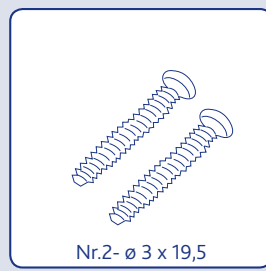
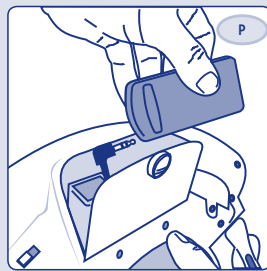
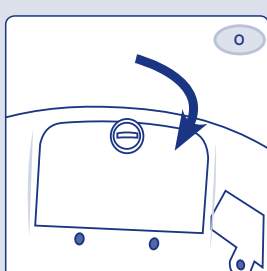
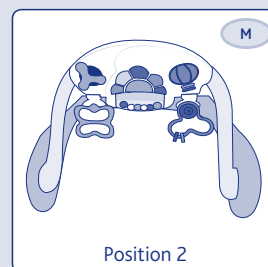
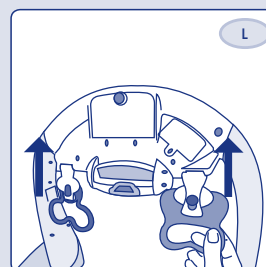
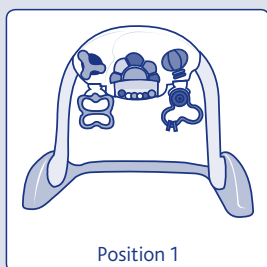
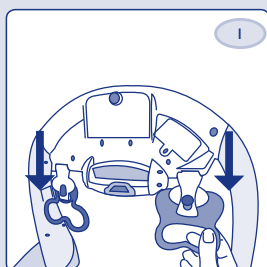
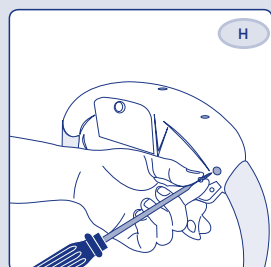
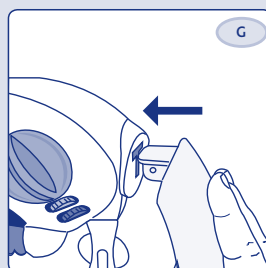
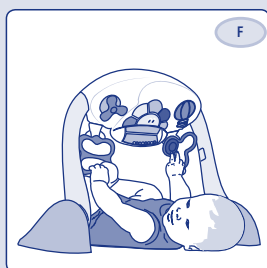
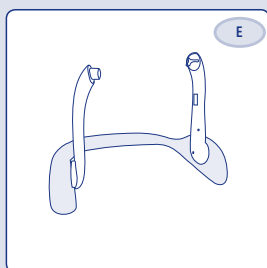
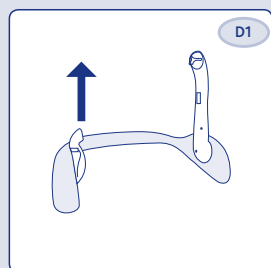
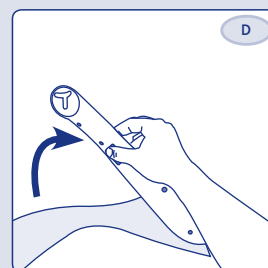
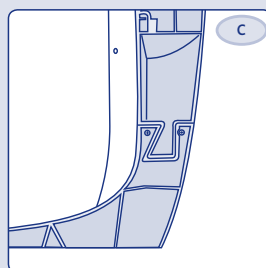
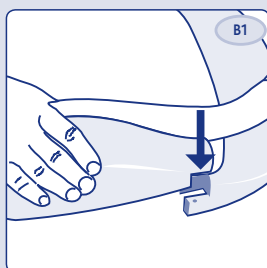


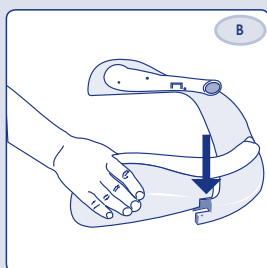

0
m+

I-GYM

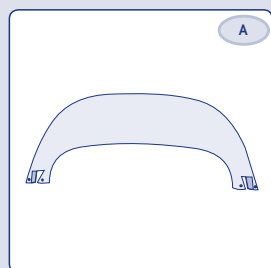

Age: 0m+

Please read these instructions carefully before using the toy and keep for future reference.
This toy runs on 2 x 1.5 Volt "AA" batteries (not included).

WARNINGS

For your child's safety:

- Before using the product, remove and dispose of any plastic bags and any other packaging elements and keep them out of reach of children. Suffocation hazard.
- This product must be assembled by adults only.
- Check the product regularly for signs of wear and damage and to ensure that it is assembled correctly. Should any part be damaged, do not use the toy and keep it out of reach of children.
- Always use under constant supervision of an adult.
- Every time you use the gym, always check that the electronic panel is firmly fitted inside the support frame.
- Always place the toy on surfaces which are perfectly level.
- The product must not be dropped or knocked harshly.
- The product must never be used on raised surfaces, for instance on tables.
- Do not change the play mode positions when the baby is inside the product.

INTRODUCTION TO THE TOY

i-GYM is the magic gym that allows you to customise the music that your little athlete listens to when he does his "exercises". Parents have the option of selecting the track play-list to accompany their child whilst playing with the gym: simply connect an Mp3 player (not included) to the plug-in port inside the compartment on the back of the activity panel. The gym is an important activity centre which has an electronic panel packed with endless tunes, sound and light effects; it entertains the baby and can be used in 2 different play positions to accompany him throughout the different growth phases.

PLAY POSITION 1) From month 3 onwards, the baby plays lying on his back freely moving his arms and legs: he has fun touching the hanging toys which activate different tunes and start a lovely light display.

PLAY POSITION 2) From month 5 onwards, baby plays lying on its tummy with movements that help develop the muscles in his back and neck. He can also play with all the manual and electronic activities on the panel.

HOW TO ASSEMBLE THE GYM

1. Place the decorated base on the floor (Diag. A).
2. Slot the two side support bases into the decorated base (Diag. B) making sure they are inserted as far as possible all the way in (Detail B-1).
3. Use the 4 screws supplied to fasten the side support bases to the decorated base (turn the frame upside down to make this operation easier). (Diag. C)
4. Grasp one of the two legs folded over its support base. Press the button inside the leg and pull it upwards (without forcing the frame). (Diag. D) The leg should be in the position seen in Diag. D1. Check that the leg remains in the required position.
5. Repeat this procedure for the second leg (Diag. E).
6. Fasten the electronic panel to the two legs, so that the activity side is facing the baby. (Diag. F). Slot the 2 hooks fitted on the ends of the legs into the 2 seats on the side of the panel, push them in, but don't force them (Diag. G; G1).
7. Use the 2 screws supplied to fasten the panel to the side legs (Diag. H). To make sure the panel is fitted correctly, grasp it and try pulling it towards the sides to check it is firmly secured.
8. Slide the two hanging toys into their slots, pushing them downwards to ensure they cannot come free. (Diag. I)
9. At this point of the assembly operation, the gym is now in POSITION 1.

Switching from PLAY POSITION 1 to PLAY POSITION 2 or vice versa

To switch from play position 1 to play position 2:

1. Remove the hanging toys from their slots by pushing them upwards (Diag. L)
2. Press both the buttons inside the legs downwards, pushing without forcing them, until they reach the horizontal position.
3. Always check it is firmly in place.
4. At this point of the operation, the gym is in POSITION 2 as seen in Diag. M.
5. To return to play POSITION 1, press the buttons inside the legs again and lift them upwards.

HOW TO USE THE ELECTRONIC PANEL

The electronic panel is packed with manual and electronic activities to entertain baby.

There is a small compartment on the back of the panel designed to hold the Mp3 (not included) connection cable; this is used to add extra musical tracks to the gym's own selection.

MP3 CONNECTION FUNCTION

To select the Mp3 connection function, move the switch to the Mp3 player icon (Diag. N; I,  mp3).

Open the compartment on the back by turning the safety button slightly (O).

Turn the Mp3 player ON, select PLAY and set the required volume.

Connect the device to the connection cable, place the Mp3 player inside the compartment and make sure it is firmly closed (Diag. P).

When this mode is selected, the child can listen to his favourite play-list; every time the baby interacts with the panel activities, this will add some entertaining sound effects to the music being played.

WARNINGS

When Mp3 mode is selected, the volume is influenced by the player volume settings. It is highly recommended to use fairly moderate volume to prevent any damage to the baby's hearing.

PRESELECTED MUSIC FUNCTIONS

- To turn the panel ON, simply move the switch on the back from the OFF position (0) to the ON (I) position (Diag. Q II .
- The two cloud and butterfly hanging toys encourage the baby to reach out and touch them, and activate the lively tunes accompanied by a spellbinding light display. This activity helps to develop the baby's eye/hand coordination skills and stimulate his visual and hearing ability.
- The cloud and butterfly hanging toys can also be used on their own as rattles.
- The play panel is packed with lots of activities that stimulate manual skills and the baby's hearing and sight awareness:
 - When baby turns the roller, the coloured balls move around inside and activate a fun tune accompanied by the sun ray lights which flash to the rhythm of the music.
 - When the propeller rotates, a cute little bee pops in and out accompanied by a funny sound effect and the sun rays flash on and off.
 - Pressing the middle of the hot air balloon activates a light and sound effect;
 - Turning the two wheels under the hot air balloon activates a light and sound effects;
 - All the electronic activities are accompanied by flashing lights.
- In order to avoid using up the batteries for no reason, it is recommended to turn off the toy by moving the switch to OFF (0) when not in use.

How to fit and remove the batteries

WARNINGS

- Batteries must only be removed and fitted by an adult.
- To replace the batteries: loosen the screw on the battery compartment cover with a screw-driver and open the cover. Then remove the spent batteries and fit new ones, ensuring that they have been fitted in the correct polarity (as shown on the product), close the battery cover, and tighten the screw.
- Always keep batteries and tools out of the reach of children.
- Always remove spent batteries from the product to avoid the danger of leakage from the battery damaging the product.
- If the batteries happen to leak liquid, replace them immediately, making sure you clean the compartment beforehand; wash your hands thoroughly if you come into contact with any such liquid.
- Always remove the batteries if the product will not be used for a long period of time
- Only use alkaline batteries of the same type or equivalent to the type recommended for the correct function of this product.
- Do not mix alkaline, standard (carbon - zinc) or rechargeable (nickel-cadmium) batteries.
- Do not mix new and old batteries.
- Do not burn or dispose of old batteries into the environment. Dispose of them at an appropriate differentiated collection point.
- Do not short-circuit the battery terminals.
- Do not attempt to recharge non-rechargeable batteries: they might explode.
- The use of rechargeable batteries is not recommended as the toy may not work properly.
- This product is not designed for use with lithium batteries.
- Always remove the batteries if the product will not be used for a long period of time
- If using rechargeable batteries, remove them from the toy before recharging them. Batteries must always be recharged under adult supervision.

CLEANING, CARE & MAINTENANCE OF THE TOY

- Use a soft damp cloth to clean the toy (electronic panel, frame and hanging toys). Do not submerge the toy in water, in order prevent damage to its electronic circuit.
- Protect the toy against heat, dust, sand and water.

Made in China.